


S338	AC refrigerant dual pressure switch
G1	Alternator
A1	Audio unit
31	Battery -
30	Battery +
B132	Camshaft position (CMP) sensor
E23	Clock
S258	Clutch pedal position (CPP) switch
CAN-H	Controller area network (data bus) high
CAN-L	Controller area network (data bus) low
B54	Crankshaft position (CKP) sensor
A15	Cruise control module
X1	Data link connector (DLC)
A130	Diagnostic module
EP	Earth point
K46	Engine control (EC) relay
A35	Engine control module (ECM)
K12	Engine coolant blower motor relay
B24	Engine coolant temperature (ECT) sensor
R96	Engine coolant thermostat
H63	Engine malfunction indicator lamp (MIL)
Y104	Evaporative emission (EVAP) canister purge valve
Y151	Exhaust gas recirculation (EGR) valve actuator
M12	Fuel pump (FP)
K20	Fuel pump (FP) relay
F	Fuse
X28-II	Fuse box/relay plate, engine bay
X28-I	Fuse box/relay plate, LH footwell
A231	Gas discharge headlamp control module
B72-II	Heated oxygen sensor (HO2S) - after cat
B72-I	Heated oxygen sensor (HO2S) - before cat
Y99	Idle air control (IAC) valve
T1	Ignition coil
15	Ignition switch - ignition ON
A162	Immobilizer control module
S39	Inertia fuel shut-off (IFS) switch
Y3	Injector
A5	Instrument panel
A75	Instrumentation control module
B25	Intake air temperature (IAT) sensor
Y102	Intake manifold air control solenoid
B69	Knock sensor (KS)
B83	Manifold absolute pressure (MAP) sensor
A178	Navigation control module
B61	Outside air temperature sensor

S159	Overdrive selection switch
S231	Power steering pressure (PSP) switch
K4	Starter motor relay
A154	Sunroof control module
B147	Throttle position (TP) sensor
S249	Transmission range (TR) switch
Y117	Transmission valve block
B33	Vehicle speed sensor (VSS)
P9	Vehicle speedometer
K256	Wide open throttle (WOT) relay

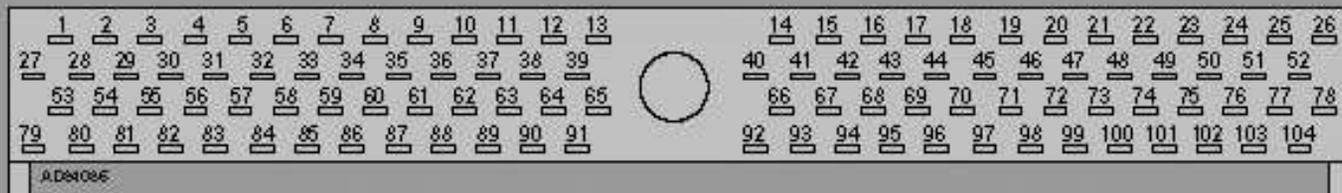

bl = blue	br = brown	el = cream	ge = yellow
gn = green	gr = grey	nf = neutral	og = orange
rs = pink	rt = red	sw = black	vi = violet
ws = white	hbl = light blue	hgn = light green	rbr = maroon
x = braided cable	y = high tension	z = non-cable connection	